



Hopper Walker Hand-Held Remote Control Quick Association

There are two types of remotes currently in circulation for the “Amber Base” style Hopper Walker. Use the directions appropriate for either the 3 light remote or 4 light remote.

Video examples available on Youtube. Search Youtube for Hopper Walker Remote.

Link 3 light Hopper Walker remote to base



1. Power off Base by pressing the red STOP button by the joystick.
2. Power off remote
3. At the same time, press and release the ON and OFF buttons on the remote.
4. Immediately press and hold the ON button until the middle (link) light stops flashing
5. While still holding down the ON button on the remote, twist the red STOP button to power on the base unit.
6. Once the base unit is powered up, release the ON button on the remote.
7. The LINK light on the REMOTE and BASE should be flashing, indicating they are ready to use.

Link 4 light Hopper Walker remote to base



1. Power off Base by pressing the red STOP button by the joystick.
2. Power off remote
3. At the same time, press and hold the ON and OFF buttons on the remote until the top two lights are on.
4. Release the ON and OFF buttons
5. Press and hold the ON button until the top light flashes
6. While still holding down the ON button on the remote, twist the red STOP button to power on the base unit.
7. When all four lights on the remote are on, release the ON button.
8. The LINK light on the REMOTE and BASE should be flashing, indicating they are ready to use.

Remotes must be associated to the base every time the remote is used with a different Hopper Walker.

**Note: This process only works for the new style “Amber” control box Hopper Walker. Older style Hopper Walkers require a crystal and specific program for the remote. Please call Hopper Walker at 800-478-7801 for assistance.*